



# Camtraptions DC Power Switch Manual (*extract*)

## Operating Modes

This section explains the three operating modes — Mode 1, Mode 2 and Mode H — and their compatibility with different sensor configurations.

- [Mode 1](#)
- [Mode 2](#)
- [Mode H](#)

# Mode 1

---

When a press signal is detected, the switch turns **ON** for **15 seconds** then automatically turns **OFF** again.

The ON time is extended by a further **15 seconds** every time an additional press is detected.

## Compatibility

For use with the Camtraptions Wireless PIR Sensor v3 (purchased after 18th January 2021), using video programs **1, 2** or **3**.

## Mode 2

---

First press turns the switch **ON**, second press turns the switch **OFF**.

### Compatibility

For use with:

- Camtraptions Wireless PIR Sensor v3 (purchased at any time), using video programs **4, 5** or **6**.
- Camtraptions PIR Sensor v2 programs **14, 16, 18, 20, 22, 24**.

## Mode H

---

The switch is **ON** while the press signal is held.

---

*Exported from [docs.camtraptions.com](https://docs.camtraptions.com).*