



Camtraptions PIR v4 Manual (*extract*)



Navigating the Menu

The Camtraptions PIR Sensor v4 features a simple and intuitive **menu system** that allows you to adjust all key settings directly from the built-in screen and keypad.

When the menu is inactive, the screen will revert to the **Home Screen**. To access the menu, press the **Left** or **Right** buttons to cycle through the available screens. The list of menu screens will differ depending on whether the sensor is set to **Still Photo Mode** or **Video Mode**.

Adjusting a Setting

1. Navigate to the desired menu screen using the **Left** or **Right** buttons.
2. Press the **Up** or **Down** button — the setting's value will begin to **flash**.
3. Use the **Up** or **Down** buttons to adjust the value to your preference.
4. Press the **Set** (centre) button to **save** the change.

If you move to another screen while a value is still flashing (without pressing **Set**), the change will **not** be saved.

When you reach the end of the available screens, the menu will loop back to the **Home Screen** automatically.

Additional (Hold) Functions

Some menu screens have **secondary functions** that can be accessed by **holding** the **Up** or **Down** buttons. For example:

- **Sensor configuration screens (Far / Wide):**

Holding the **Up** button cycles the sensor mode between **Enabled**, **Disabled**, and **Wake-Only**.

- **Wireless Channel screen:**

Holding the **Down** button **disables** the wireless transmitter completely, switching the sensor to wired-only operation.

Refer to the individual **Settings** sections later in this manual for detailed descriptions of each menu screen and the available configuration options.

This manual extract applies to firmware version 1.19.

Exported from docs.camtraptions.com.