



# Camtraptions PIR v4 Manual (*extract*)



# Video Mode Menu Overview

When the sensor is set to **Video Mode**, pressing the **right arrow** from the Home Screen will cycle through the following menu screens in order. Each screen allows configuration of a key parameter controlling how the sensor detects motion and manages video recording. After the final screen, the menu loops back to the Home Screen.

1. **[Wireless Channel](#)** - Set or disable the wireless transmission channel used to communicate with Camtraptions receivers.
2. **[Wide Sensor](#)** - Control the behaviour and relative sensitivity of the wide-angle PIR sensor.
3. **[Far Sensor](#)** - Control the behaviour and relative sensitivity of the narrow-field, long-range PIR sensor.
4. **[Time \(Recording Length\)](#)** - Define the duration of each video recording following a detection.
5. **[Gap](#)** - Set a retrigger delay between recordings to manage how soon the sensor is able to reactivate.
6. **[Extend Time \(EXT\)](#)** - Enable or disable Extend Mode. When enabled, motion detected during recording resets the timer, extending the clip until motion stops or the maximum limit is reached.
7. **[Video Mode \(Signal Type\)](#)** - Select the type of control signal used to start and stop video recording, depending on camera brand: *1 Press*, *2 Press*, or *Hold* mode.
8. **[Wake Time](#)** - Configure a wake-up period to give cameras time to power up before recording begins.
9. **[Set Time](#)** - Adjust the internal real-time clock to ensure accurate time-based operation.
10. **[Time Mode](#)** - Enable or disable time windows that restrict when the sensor is active.
11. **[Set On Time](#)** - Define the time of day when the sensor becomes active.
12. **[Set Off Time](#)** - Define the time of day when the sensor becomes inactive.
13. **[External Wake](#)** - Schedule periodic half-press pulses to prevent connected equipment from entering deep sleep.
14. **[Set Mode](#)** - Switch between **Video** and **Still** operating modes.

After the **Set Mode** screen, pressing the **right arrow** again returns to the **Home Screen**.

---

*This manual extract applies to firmware version 1.19.*

*Exported from [docs.camtraptions.com](https://docs.camtraptions.com).*