



# Camtraptions PIR v4 Manual

*(extract)*



## Wireless Channel

The **Wireless Channel** menu screen allows you to select which **wireless channel** the sensor's built-in transmitter will use to communicate with your **Camtraptions Wireless Receiver**.




### Accessing the Wireless Channel Setting

1. From the **Home Screen**, press the **Right Arrow** button until you reach the **Wireless Channel** screen.
2. Use the **Up** or **Down** buttons to change the wireless channel number.
3. Press the **Set** (centre) button to **save** your selection.

The selected channel must match the channel set on your **Camtraptions Wireless Receiver** for proper operation.

### Available Channels

The sensor supports **15 wireless channels**, numbered 1-15. Each corresponds directly to the same numbered channel on the [Camtraptions Wireless Receiver](#).

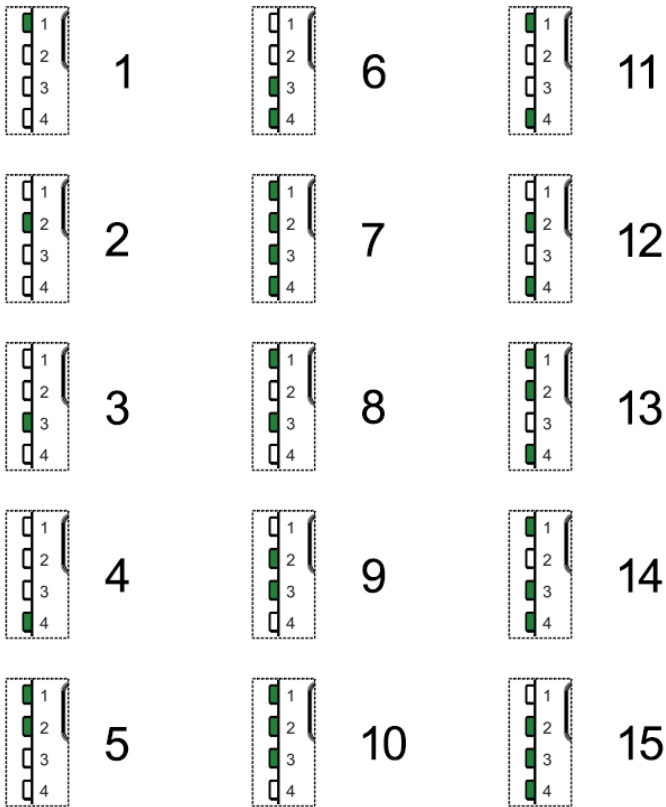

## Disabling Wireless Transmission

To **disable the wireless transmitter** completely (for wired-only operation):

- Press and **hold** either the **Up** or **Down** button for more than **2 seconds** while on the Wireless Channel screen.

The display will show **“OFF”**, indicating that wireless transmission is disabled.

In this mode, the sensor will **only trigger connected devices via the wired output socket**. It will also conserve some power and allow the sensor to operate for even longer in the field.

---

*This manual extract applies to firmware version 1.19.*

*Exported from [docs.camtraptions.com](http://docs.camtraptions.com).*