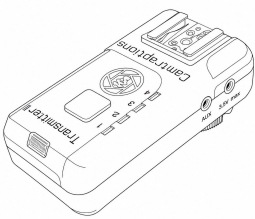 
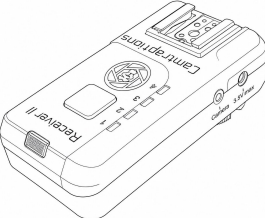 


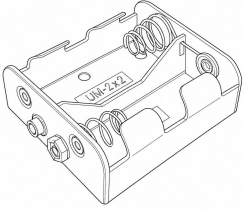 
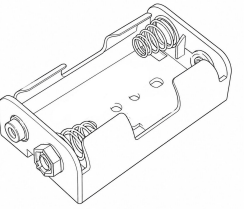 
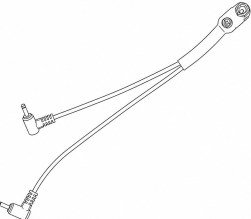 
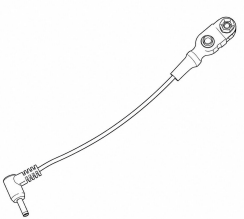 


Camtraptions Quick Deploy Camera Trap Manual (*extract*)

Wireless-only Components

1. Wireless Trigger Equipment

Image	Part Name	Quantity	Purpose
	Wireless Transmitter v2	1	Mounted directly in the camera's flash hot shoe. Sends wireless flash trigger signals to the two Receivers mounted on the two Z Pro Flashes.
	Wireless Receiver v2	3	One Receiver is loose inside the Camera Housing and connected to the camera's shutter release socket via a Camera Connecting Cable (sold separately). Each of the other two Receivers is mounted on a Z Pro Flash.

	2xC Battery Holder	3	Can be optionally plugged into the wireless triggers to power them using C size cells for around two months of life.
	2xAA Battery Holder	3	Can be optionally plugged into the wireless triggers to power them using AA size cells for around two weeks of life.
	DC Splitter Cable	1	Connects one 2xC or 2xAA Battery Holder to the Transmitter and Receiver contained inside the Camera Housing.
	DC Single Cable	2	Connects one 2xC or 2xAA Battery Holder to the Receivers mounted on each Z Pro Flash.

Exported from docs.camtraptions.com.