



Camtraptions Sony Video Cable v2 Manual (*extract*)

Operating Modes

This section describes Mode A and Mode B — two different recording behaviours that can be selected using the slider switch on the cable.

- [Mode A](#)
- [Mode B](#)

Mode A

Camera is woken, records for **15 seconds** then automatically returns to the powered-down state. Recording time is extended by a further **15 seconds** if there are additional **full-press** signals during the recording period.

How It Works

The input from **full-press** starts the camera recording. Recording stops when **15 seconds** has elapsed since the last **full-press** occurred.

Multi-Sensor Camera Traps

Mode A can be used in a multi-sensor camera trap, where multiple Wireless PIR Sensors can be linked to a single camera to cover different approach paths.

Compatibility

For use with:

- Camtraptions Wireless PIR Sensor v3 (purchased after 18th January 2021), using video programs **1, 2** or **3**

Mode B

Full-press starts recording, second **full-press** stops recording.

How It Works

The moment **full-press** is detected the camera is instructed to record. Recording stops only after **full-press** is released and a second **full-press** is detected.

Note: This mode does not auto-power-off the camera after recording. Configure the camera itself to auto-power-off via its menu.

Compatibility

For use with:

- Camtraptions Wireless PIR Sensor v3 (purchased at any time), using video programs **4, 5** or **6**
- Camtraptions PIR Sensor v2 programs **14, 16, 18, 20, 22, 24**
- When manually triggering recordings using a wired or wireless shutter release

Exported from docs.camtraptions.com.